

Items needed for adjuster strap replacement:

- Scissors
- Needle nose pliers or tweezers
- New adjuster strap with yoke

Replacement Instructions

1. Remove old adjuster strap.
 - Lift cover to allow access to adjuster portion of the restraint.
 - Carefully cut old adjuster strap (Fig. A).
 - From the rear/bottom of the restraint, slide both harness straps off metal yoke (Fig B).
 - Depending on the type of adjuster your seat has, press or lift adjuster release lever and remove both pieces of the old adjuster strap.
 - Discard both pieces of old adjuster strap.
2. Install new adjuster strap.
 - Press or lift adjuster release lever while feeding the new adjuster strap through the adjuster from the rear toward the front. If necessary, use needle nose pliers or tweezers to help pull the strap through the adjuster (Fig. C).

IMPORTANT: *If your seat features a lift style adjuster, you must route the new strap OVER the metal bar, then through the adjuster.*

 - Verify that the harness and adjuster straps are not twisted, then attach each harness loop to the yoke (Fig. D).
3. Verify that installation of new adjuster strap is correct.
 - Check to make sure that harness and adjuster straps are not twisted.
 - Tighten and loosen harness to verify that it is functioning properly.
 - Refit cover on seat shell.

