

Forward Facing Lock-off Installation

Items required to replace the forward facing lock-off :

- New Forward Facing Lock-off
- T20 Star Head Screws (2)
- T20 Star Head Screwdriver

Use the procedure below to replace the forward facing lock-off.

1 Remove the existing forward facing lock-off by loosening the two star head screws, from the rear of the restraint, with the star head screwdriver (*Fig. A & B*).

2 Slide the old lock-off out of the slot.

3 Slide the new lock-off into the slot (*Fig. C*).

4 Hold the lock-off tight against the rear of the slot while tightening one star head screw into each hole (*Fig. D*).

5 Verify that the lock-off is properly aligned and secured on the restraint (*Fig. E*).

